



DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

SAFE-m6(T)

USA




DNH Speakers Inc

Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793


E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED

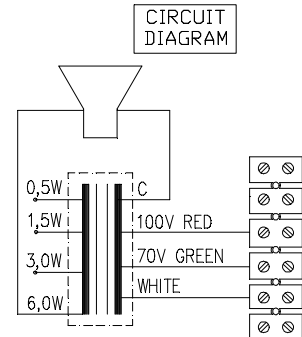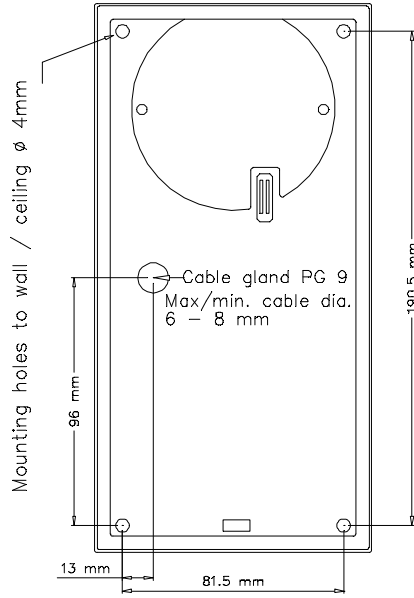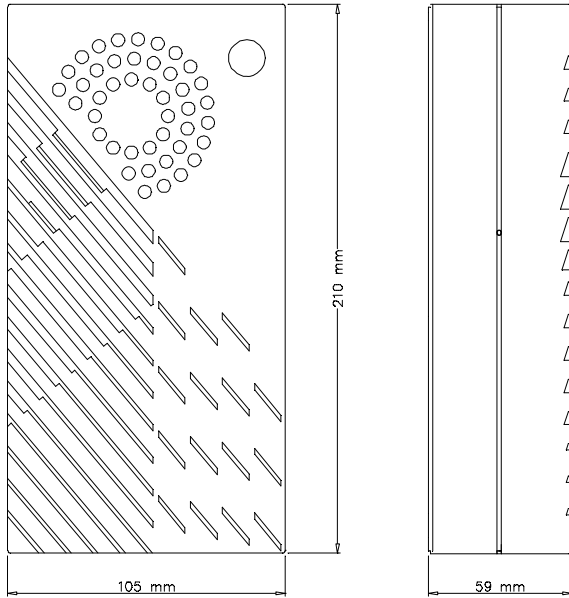

Primary connection	
White:Green	70V
White:Red	100V
Secondary nominal tapings	
C : 6W	6,0 W
C : 3W	3,0 W
C : 1,5W	1,5 W
C : 0,5W	0,5 W

Sound pressure levels at 1W/1m

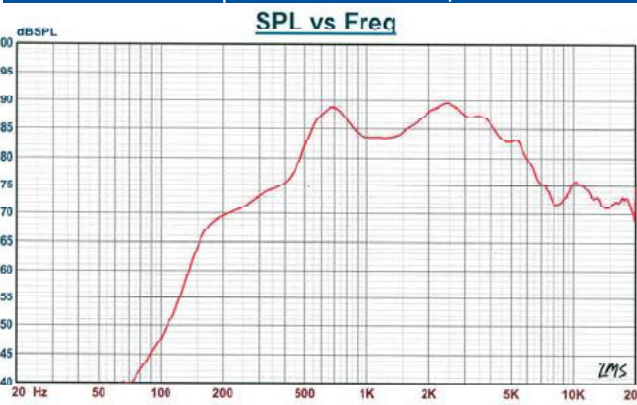

Specifications

Material / Color	Aluminium / RAL9010 or RAL3000
Mounting	4 screws
Termination	Inside screw terminal
Weight w/transformer	1,35 kg
IP-rating	56(Terminal chamber)
Max. / min. amb. temp	150°C / -40°C
Rated / max. power	6 W / 10 W
SPL 1W/1m	85 dB
SPL rated power	93 dB
Effective freq. range	190 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	160° / 90°
Directivity factor, Q	NA
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Open the cabinet using the enclosed Allen key to loosen the three screws on 3 sides of the cabinet.
- Lead cable through the cable gland and connect to terminal 70V (white – green) or 100V (white – red).
- Choose required power on the transformer.
- Fasten the mounting plate to wall or ceiling by 4 screws.
- Close the cabinet by fasten three screws on 3 sides of the cabinet.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

DNH reserves the right to alter specifications without notice

