



**DNH AS** Phone.....+ 47 35 98 56 00 Fax.....+ 47 35 98 56 10 .....dnh@dnh.no E-mail. Web-Site..... www.dnh.no

## ENGLAND **DNH WW Ltd**

Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk


## GERMANY **DNH GmbH**

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail.....dnh@dnh.de

## **DNH Speakers Inc**

Phone......+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

**HS-15S(T)** 

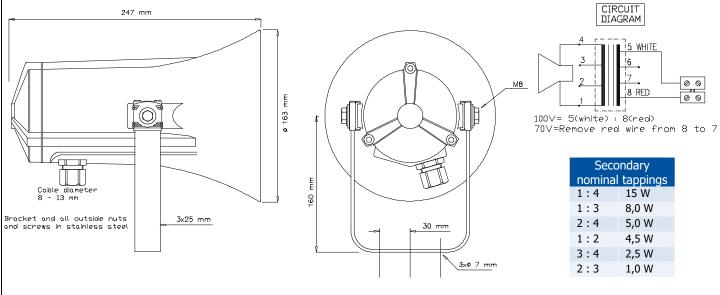

Sound pressure levels at 1W/1m SPL vs Freq dBSPL 110 100 90 80 70 60 IMS 50 20K 20 Hz 50 100 200 500 1K 2K 5K 10K

Specifications	
Material / Color	Aluminum alloy / RAL 7035
Mounting	Bracket
Termination	Inside screw terminals
Weight w/transformer	2,7 kg
IP-rating	55
Max. / min. amb. temp	150°C / -50°C
Rated / max. power	15 W / 20 W
SPL 1W/1m	107 dB
SPL rated power	118 dB
Effective freq. range	350 – 7500 Hz
Dispersion (-6dB) 1kHz / 4kHz	140° / 50°
Options	Impedances, colors, labels

## Installation, Operation and Maintenance Procedures

- H-15S is designed to withstand sound shocks (maximum 175 dB).
- Fasten the bracket to wall with 1-3 screws and ensure to use all washers in the same position that the loudspeaker is delivered with. (To isolate the main body from the bracket).
- Open the lid back 3 screws. Lead cable through cable gland and connect to terminal. Screw lid back into place, 3 screws with a torque of 2 - 3 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- The aluminum surface of the loudspeaker should be regularly treated with paint at the same interval as with other similar outdoor equipment.
- Do not open loudspeaker when energized.

THEUNISSEN

CHNICAL TRADING BV

This loudspeaker is supplied with a 2 year warranty against defective workmanship.



Rev. 10.05.2012

