



Web-Site..... www.dnh.no


.....dnh@dnh.no

MD-40(T)

ENGLAND DNH WW Ltd GERMANY DNH GmbH

<u>USA</u> DNH Speakers Inc

Phone......+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

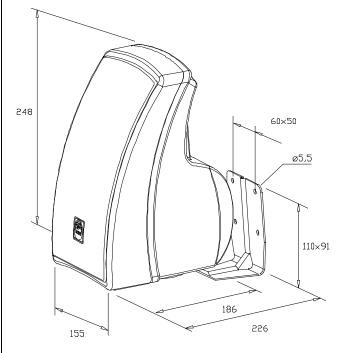




Optional
DP bracket plastic



Standard bracket

MD-40 is delivered with standard bracket, backlid and cable glands. kabel dia 4-7,5mm - PG7

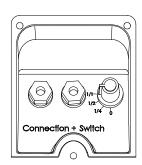

Secondary					
switch tappings					
1 / 1	40,0 W				
1/2	20,0 W				
1/4	10,0 W				

dBSPL	Sound pressure levels at 1W/1m SPL vs Freq								
95									
90					M	M		٨	
85	,	~~	~~	~		~ /	M) ~	
80	/		V	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	W		M A		
75	/								
70									
55	/							÷	
50									
55								LMS	
50 Hz 50	100	200	500	1K	2K	5K	10K	112	

BS / Black
racket
crew terminal
1 kg
1 *
0°C / -40°C
0 W / 60 W
7 dB
03 dB
0 – 20000 Hz
05° / 50°
npedances, colors, labels
4

Installation, Operation and Maintenance Procedures

- MD-40 is available with 40W transformer, and optional brackets are available on request.
- Screw bracket to wall or ceiling, place cabinet onto ball socket and tighten bolt.
- Connect to screw terminal and select required volume with the switch.
- Screw on lid with gasket and tighten cable glands to assure a good sealing towards cable.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.
 - * To achieve IP the loudspeaker should be mounted with the grill 30 degrees downwards.

CE

