



Web-Site..... www.dnh.no

## ENGLAND DNH WW Ltd Phone......+ 44 1908 275 000 Phone.....+ 49 0


Fax.....+ 44 1908 275 100


E-mail.....dnh@dnh.co.uk


 MD-60(T)

DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

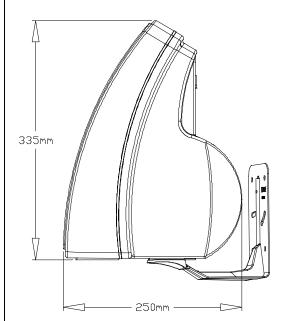


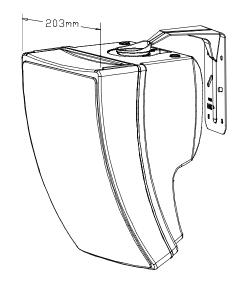

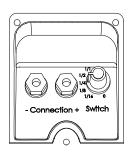

Secondary		
switch tappings		
1 / 1	60,0 W	
1/2	30,0 W	
1 / 4	15,0 W	
1/8	7,5 W	
1 / 16	3,5 W	

MD-60T is delivered with standard steel bracket as shown on the drawing, termination lid, gasket, cable glands, screws and one screw for fastening of bracket to cabinet.

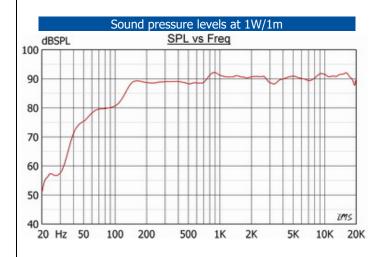

Specifications	
Material / Color	ABS / Black
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	3,9 kg
IP-rating	44*
Max. / min. amb. temp	90°C / -20°C
Rated / max. power	60 W / 100 W
SPL 1W/1m	90 dB
SPL rated power	109 dB
Effective freq. range	45 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	110° / 55°
Options	Impedances, colors, labels
IP-rating Max. / min. amb. temp Rated / max. power SPL 1W/1m SPL rated power Effective freq. range Dispersion (-6dB) 1kHz / 4kHz	44* 90°C / -20°C 60 W / 100 W 90 dB 109 dB 45 - 20000 Hz 110° / 55°

## **Installation, Operation and Maintenance Procedures**

- MD-60 is available with 60W transformer, and optional brackets are available on request.
- Screw bracket to wall or ceiling, place cabinet onto ball socket and tighten bolt.
- Connect to screw terminal and select required volume with the switch.
- Screw on lid with gasket and tighten cable glands to assure a good sealing towards cable.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.
  - \* To achieve IP 44 the loudspeaker should be mounted with the grill 30 degrees downwards.

 $\epsilon$ 

