



DNH AS	
Phone	+ 47 35 98 56 00
Fax	+ 47 35 98 56 10
E-mail	dnh@dnh.no
Wah-sita	www.dnh.no

**DNH WW Ltd** 

Phone......+ 44 1908 275 000

Fax....+ 44 1908 275 100


E-mail.....dnh@dnh.co.uk


## CAPEEX-6(T)x2

<u>GERMANY</u>		
DNH	GmbH	

## USA DNH Speakers Inc


Phone.....+ 1 484 494 5790 Fax...+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

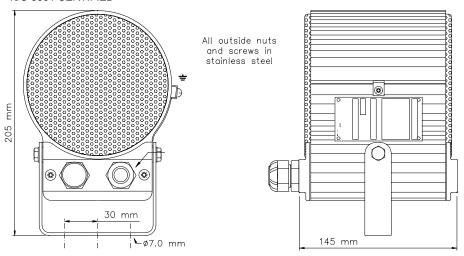

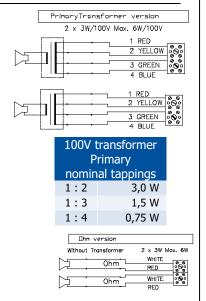

Certified by/ Certification code / Number: NEMKO / EEx de IIB+H2 T6 Gb / Nemko 10 ATEX 1054 IECEx NEM 11.0016



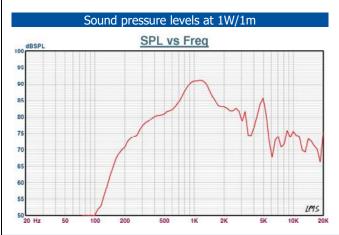

Standard model delivered with four

M20 Ex approved plastic blinding plugs

Specifications		
Material / Color	Aluminum / anodized	
Mounting	Foot bracket	
Termination	e-chamber, screw terminals	
Weight w/transformer	3,8 kg	
IP-rating	67	
Max. / min. amb. temp	40°C / -20°C	
Rated / max. power	3 W / 6 W	
SPL 1W/1m	81 dB	
SPL rated power	85 dB	
Effective freq. range	190 – 20000 Hz	
Dispersion (-6dB) 1kHz / 4kHz		
Directivity factor, Q		
Options	Impedances, colors, labels	

## **Installation, Operation and Maintenance Procedures**

- Two separate loudspeakers, two transformers and two terminals in one Ex housing (A & B system).
- Enter the e-chamber by loosening the screws on the lid and terminate the cables in the screw terminals.
- Connect the speakers to the same phase.
- Fasten loudspeaker to wall or ceiling with three screws.
- Fasten lid screws with a torque of 2 3 Nm to assure the IP rating.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Use only certified/specified cable glands and blanking plugs.
- Standard model delivered with four M20 Ex approved plastic blinding plugs.
- Do not open loudspeaker when energized.
- Ex-loudspeakers must be earthed correctly using the specially marked screws.
- This loudspeaker is supplied with a two years warranty against defective materials and workmanship.

CE

