



ISO 9001 CERTIFIED

DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
Fax..... + 47 35 98 56 10
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH


Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de

USA

DNH Speakers Inc

Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..dnh@dnhspeakers.com

HPA-60

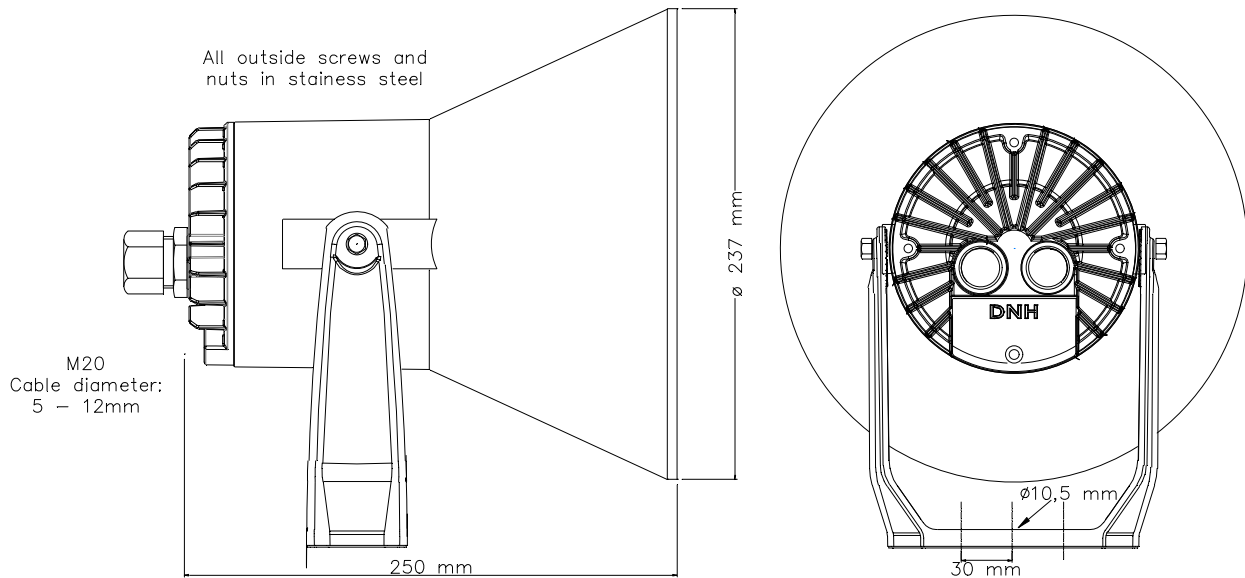

Sound pressure levels at 1W/1m

SPL vs Freq



Specifications

Material / Color	PA/aluminum alloy / RAL 7035
Mounting	Bracket
Termination	Inside screw terminal
Weight	1,9 kg
IP-rating	67
Max. / min. amb. temp	150 °C / -50 °C
Rated / max. power	60 W / 60 W
SPL 1W/1m	110 dB
SPL rated power	126 dB
Effective freq. range	310 – 7000 Hz
Dispersion (-6dB) 1kHz / 4kHz	115° / 30°
Directivity factor, Q	
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Open lid by one screw, lead cable through cable gland and connect cable to terminal.
- Screw the lid by one screw and tighten cable gland.
- To change the position of the loudspeaker please adjust the bracket (by loosening / tightening the screws) as required.
- Stainless steel bracket is available as an option.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a two years warranty against defective workmanship.

NB! Not available with transformer. Separate matching transformer can be delivered.

DNH reserves the right to alter specifications without notice

