



Web-Site..... www.dnh.no


HS-15(T)


GERMANY


DNH GmbH

Phone... + 49 040 6569 30-0 Fax...... + 49 040 6569 30-30 E-mail......dnh@dnh.de <u>USA</u> DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

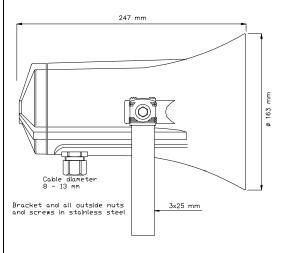

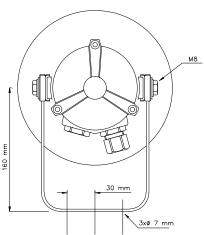

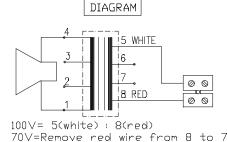

CIRCUIT

Secondary				
nominal	tappings			
1:4	15 W			
1:3	8,0 W			
2:4	5,0 W			
1:2	4,5 W			
3:4	2,5 W			
2:3	1,0 W			

dBSPL						
10						
00			\sim		N	
90					1	
80						
70						Ly
60						

Specifications					
Material / Color	Aluminum alloy / RAL 7035				
Mounting	Bracket				
Termination	Inside screw terminals				
Weight w/transformer	2,7 kg				
IP-rating	67				
Max. / min. amb. temp	150°C / -50°C				
Rated / max. power	15 W / 20 W				
SPL 1W/1m	107 dB				
SPL rated power	118 dB				
Effective freq. range	350 – 7500 Hz				
Dispersion (-6dB) 1kHz / 4kHz	150° / 40°				
Options	Impedances, colors, labels				

Installation, Operation and Maintenance Procedures

- Fasten the bracket to wall with 1-3 screws and ensure to use all washers in the same position that the loudspeaker is delivered with. (To isolate the main body from the bracket)
- Open the lid back 3 screws. Lead cable through cable gland and connect to terminal.
- Screw lid back into place, 3 screws with a torque of 2 3 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- The aluminum surface of the loudspeaker should be regularly treated with paint at the same interval as with other similar outdoor equipment.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

(€

